MACHINE TYPE :SS feeders CLASSIFICATION :Maintenance REFERENCE :SS Feeder User's Manual No: SI1008003E-000 ISSUED DATE: October 1, 2010

Service Information

SS Feeder Maintenance Parts List

General description:

This document provides the list of SS feeder maintenance parts for customers use.

Notes:

- YAMAHA is not responsible for any problems caused by the misuse of this document.
- Make sure to thoroughly understand the contents of the document, and perform relevant operations on your own responsibility.
- All rights reserved.

Safety:

Strictly follow the safety precautions in the "Safety" section in the "User's Manual".

Disclaimers:

This document contains the preliminary information subject to change in the future.

The information contained in this document represents the current view of YAMAHA on the issues discussed as of the date of issuance. As YAMAHA must respond to changing market conditions, it should not be interpreted to be a commitment on the part of YAMAHA, and YAMAHA cannot guarantee the accuracy of any information presented after the date of issuance.

This document is provided for information purposes only, and it is provided without any warranties, either express or implied.

It is the responsibility of the user to comply with all applicable copyright laws. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the written permission of YAMAHA.

However, this shall not be construed to limit the user's right granted by Copyright law.

YAMAHA may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from YAMAHA, this document does not give users any license to these patents, trademarks, copyrights, or other intellectual property.

The names of actual companies and products mentioned in this document may contain the trademarks of their respective owners.

SS Feeder Maintenance Parts

Common parts

	Part No.	Part Name	Q'ty	8	12/16	24	32	44	56	72	88	Remarks
4	KHJ-MC1A9-00	CONNECTOR, BOARD	1	0	0	0	0	0	0	0	0	Common for 8-88 mm feeders
5	KHJ-MC104-00	RAIL,UNDER	1	0	0	0	0	0	0	0	0	Common for 8-88 mm feeders
3	KHJ-MC281-00	HANDLE	1		0	0	0	0	0	0	0	Common for 12-88 mm feeders
6	KHJ-MC244-00	LEVER, TAPE GUIDE R	1		0	0	0	0	0	0	0	Common for 12-88 mm feeders

Feeder-size-specific parts

	Part No.	Part Name	Q'ty	8	12/16	24	32	44	56	72	88	Remarks
No.	KHJ-MC100-00	SS FEEDER ASSY. 8MM	1									
1	KHJ-MC141-03	TAPE GUIDE ASSY.	1	0				-				For 8 mm feeders
2	KHJ-MC145-01	LEVER, TAPE GUIDE F	1	0				1				For 8 mm feeders
3	KHJ-MC181-00	HANDLE	1	0			1	1		1		For 8 mm feeders
6	KHJ-MC144-00	LEVER, TAPE GUIDE R	1	0				:				For 8 mm feeders
No.	KHJ-MC200-00	SS FEEDER ASSY. 1216	1									
1	KHJ-MC24J-04	TAPE GUIDE ASSY.12	1		0			1		-		For 12 mm feeders
1	KHJ-MC241-05	TAPE GUIDE ASSY.16	1		0			1				For 16 mm feeders
2	KHJ-MC245-01	LEVER, TAPE GUIDE F	1		0	1	1	1	1			For 12/16 mm feeders
No.	KHJ-MC400-00	SS FEEDER ASSY. 24MM	1									
1	KHJ-MC441-05	TAPE GUIDE ASSY.	1			0		:		-		For 24 mm feeders
2	KHJ-MC445-01	LEVER, TAPE GUIDE F	1			0	1 1 1	:	1 1 1	1		For 24 mm feeders
No.	KHJ-MC500-00	SS FEEDER ASSY. 32MM	1									
1	KHJ-MC541-03	TAPE GUIDE ASSY.	1				0	:		-		For 32 mm feeders
2	KHJ-MC545-01	LEVER, TAPE GUIDE F	1				0	:				For 32 mm feeders
No.	KHJ-MC600-00	SS FEEDER ASSY. 44MM	1									
1	KHJ-MC641-03	TAPE GUIDE ASSY.	1					0				For 44 mm feeders
2	KHJ-MC645-01	LEVER, TAPE GUIDE F	1					0				For 44 mm feeders
No.	KHJ-MC700-00	SS FEEDER ASSY. 56MM	1									
1	KHJ-MC741-03	TAPE GUIDE ASSY.	1					:	0			For 56 mm feeders
2	KHJ-MC745-01	LEVER, TAPE GUIDE F	1				1	:	0			For 56 mm feeders
No.	<u>KHJ-MC800-00</u>	SS FEEDER ASSY. 72MM	1									
1	KHJ-MC841-03	TAPE GUIDE ASSY.	1					1		0		For 72 mm feeders
2	KHJ-MC845-01	LEVER, TAPE GUIDE F	1					:		0		For 72 mm feeders
No.	KHJ-MC900-00	SS FEEDER ASSY. 88MM	1									
1	KHJ-MC941-00	TAPE GUIDE ASSY.	1								0	For 88 mm feeders
2	KHJ-MC945-00	LEVER, TAPE GUIDE F						!			0	For 88 mm feeders

